


Fabric Display


ERM




1 Remove frame and graphic from carry bag.

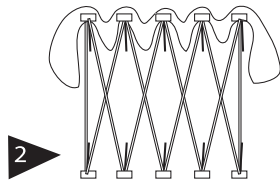

2 Stretch frame to size. Make sure graphic is not wrapped around connectors or feet.

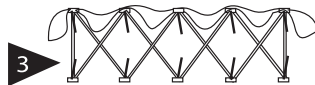



3 Pull frame outward and align locking connectors.

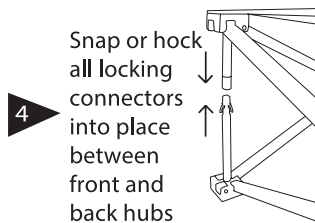


4 Snap or hook all locking connectors into place between front and back hubs

OPTIONAL


Attach lights to top of frame by sliding the light over the channel on top of the frame.

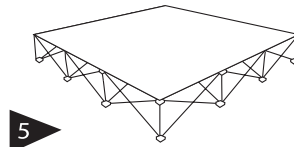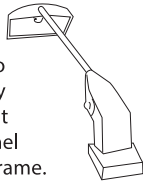

5 Unit is locked and graphic is attached.

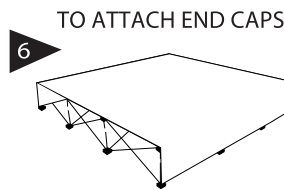

6 TO ATTACH END CAPS
Pull end caps down to corner of frame and attach. Attach other corner. Repeat on opposite side.

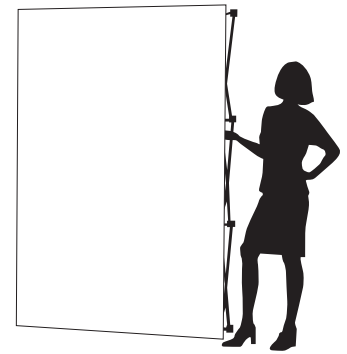

7 Lift frame into place.




Unit is complete.

It is extremely important that the fabric remains on frame. Do not place on floor or other dirty services. If the materials are not returned in the same condition as what you received, your budget center could be charged accordingly. This includes additional cleaning fees if the materials are returned dirty, stained or blemished.

TO COLLAPSE

1 To collapse unit, first remove end cap graphics on both sides and fold onto top of frame.

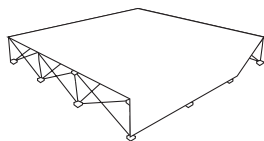

2 Unlock all locking arms.



J-hook locking arm version

3 Once all arms are unlocked, slowly push frame inward to collapse making sure fabric graphic is not entangle with locking arms.



WARNING!

AVOID DAMAGE!

Make sure to manually release all connectors before breaking down. Unhook ALL "j-hooks" or "snap locking arms" before collapsing the frame.

ANY RESISTANCE STOP!

Hooks are still connected. Frame will collapse after the last connector is released. Be ready.

FAILURE TO DISENGAGE ALL CONNECTORS AND SEPARATE SIDE GRAPHIC WILL DAMAGE FRAME.

6371 NE 14th Street
Des Moines, IA 50313
www.exhibit-resources.com
515-331-0439

